
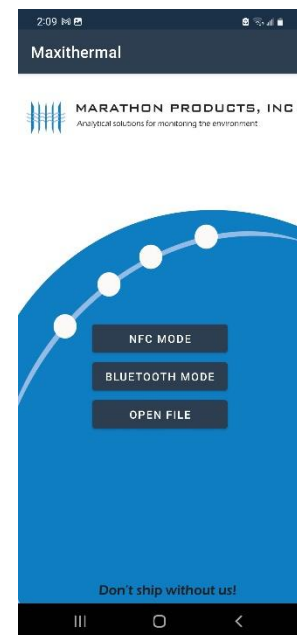
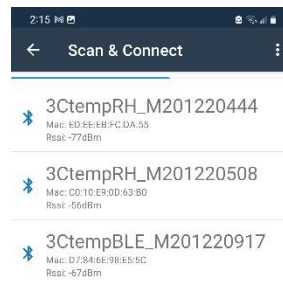


## MAXITHERMAL BLE instructions

Using the Maxithermal Bluetooth APP will enable you to scan the read and program Marathon 3v\temp BLE dataloggers for temperature and or RH.

### Customizable Parameters

- Upper & lower temperature limits
- Synchronised time
- Collection interval
- Clear data
- Temperature and RH
- Export historical data: export data will be sent or stored in csv format.
- Export data table. Data format: date time + temperature
  - 1) Go to Google play and search for MAXITHERMAL and install the APP
  - 2) Make sure both **Bluetooth** and **Location** are turned on the phone.
  - 3) Turn on the Maxithermal APP
  - 4) Press and hold the Start button for up to **3** seconds until the BT symbol appears on the LCD display of the 3ctemp BLE datalogger
  - 5) Click **BLUETOOTH MODE** and Scan in the MAXITHERMAL APP.
  - 6) You will then see a list of available Marathon 3cTEMP BLE units. Choose one
  - 7) You can now see **SETTINGS /GENERAL INFORMATION** or **READ DATA**.
  - 8) Select **SETTINGS**

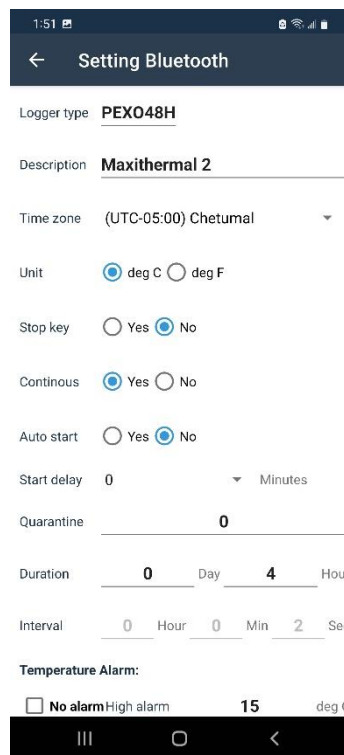


-in here you can set the run time, temperature limits and more.



1295 Morningside Avenue, Unit 16-18  
 Scarborough, ON M1B 4Z4 Canada  
 Phone: 416-261-4865 Fax: 416-261-7879  
[www.scigiene.com](http://www.scigiene.com)

- 9) If you select GENERAL INFORMATION, you can see the settings in the unit.
- 10) IF you select OPEN FILE, you will see a list of available units
- 11) If you select any of these you can then open the file to see the GRAPH

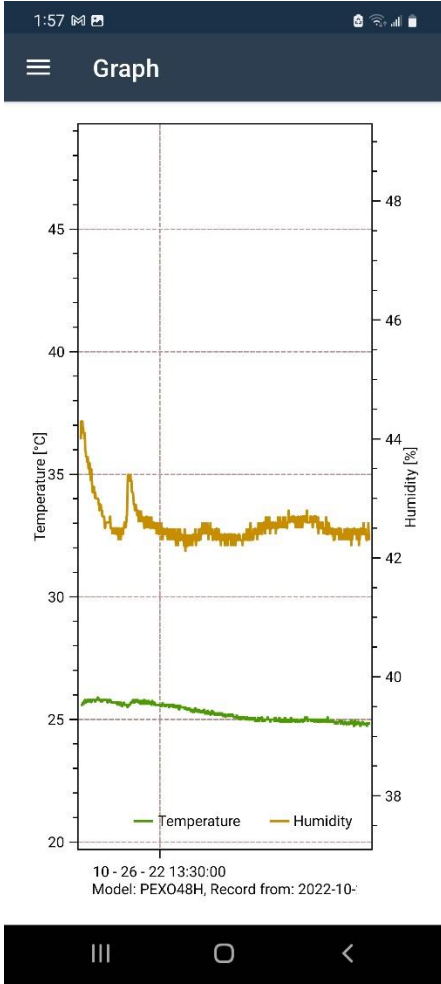

2:15

Scan & Connect

- 3CtempRH\_M201220444  
Mac: ED:EE:EB:FC:DA:55  
Rssi: -77dBm
- 3CtempRH\_M201220508  
Mac: C0:10:E9:0D:63:B0  
Rssi: -56dBm
- 3CtempBLE\_M201220917  
Mac: D7:84:6E:98:E5:5C  
Rssi: -67dBm

2:04

General Information

Logger status: pexo\_run

Setting information

Unit: Celsius

Stop key: No

Setting time: 2022-10-26 1:18:44 PM

Start Delay: 0 minute

Run mode: Continuous

Auto start: No

Temperature alarm

High alarm 15°C

Low alarm 5°C

Measurement

Duration: 0day 4hours

Interval: 0h 0m 2s

Quarantine: 0



1295 Morningside Avenue, Unit 16-18  
 Scarborough, ON M1B 4Z4 Canada  
 Phone: 416-261-4865 Fax: 416-261-7879  
[www.scigiene.com](http://www.scigiene.com)